




**Service Bulletin**  
**12/11/13**  
**Artesian Series POU Mechanical Float**  
**Models: PSWSA1SK & PSWSA1SHS**

If there is no water flowing out of either faucet follow the steps below to reset the mechanical float. After removing the screws, lift up lid. Push the reset button about 1/2 or 3/4 down. Be careful to not push the button through the lid. The button will come back up after pushing. When the unit is moved or bumped, this causes the water to slosh around in the reservoir and the secondary float may be activated.

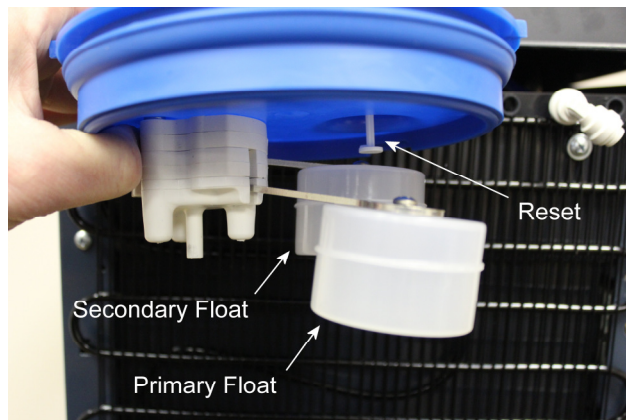

[www.oasiscoolers.com](http://www.oasiscoolers.com)  
[www.oasis-parts.com](http://www.oasis-parts.com)

---

222 East Campus View Blvd | Columbus, Ohio 43235  
614.861.1350 | 800.646.2747  
oasiscoolers.com

